
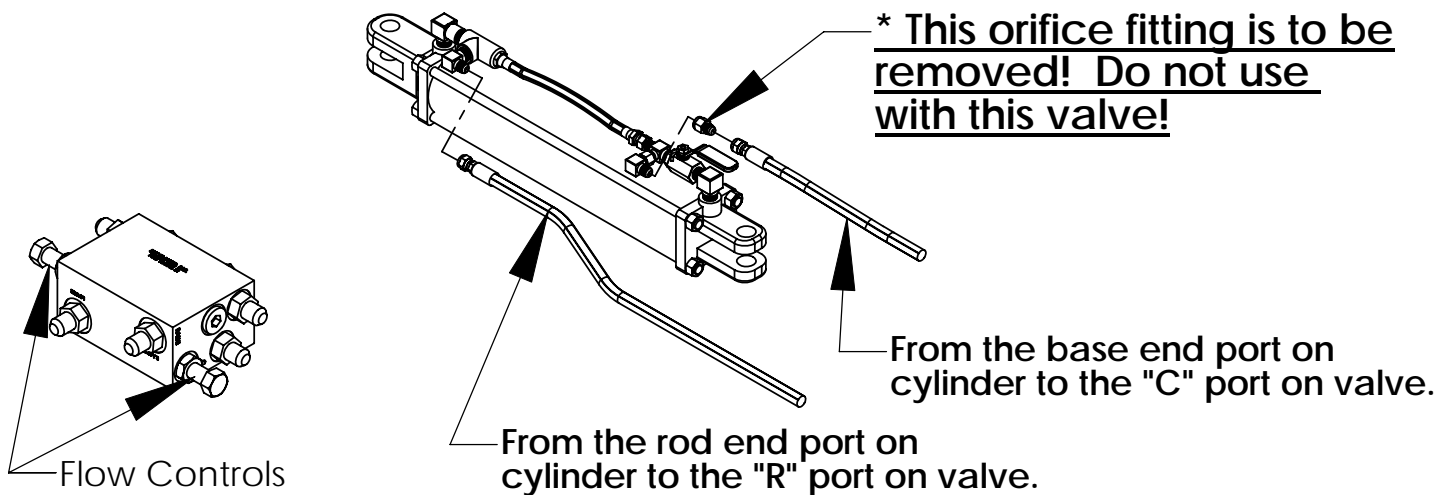


MARKER - HOSE & VALVE INSTRUCTIONS

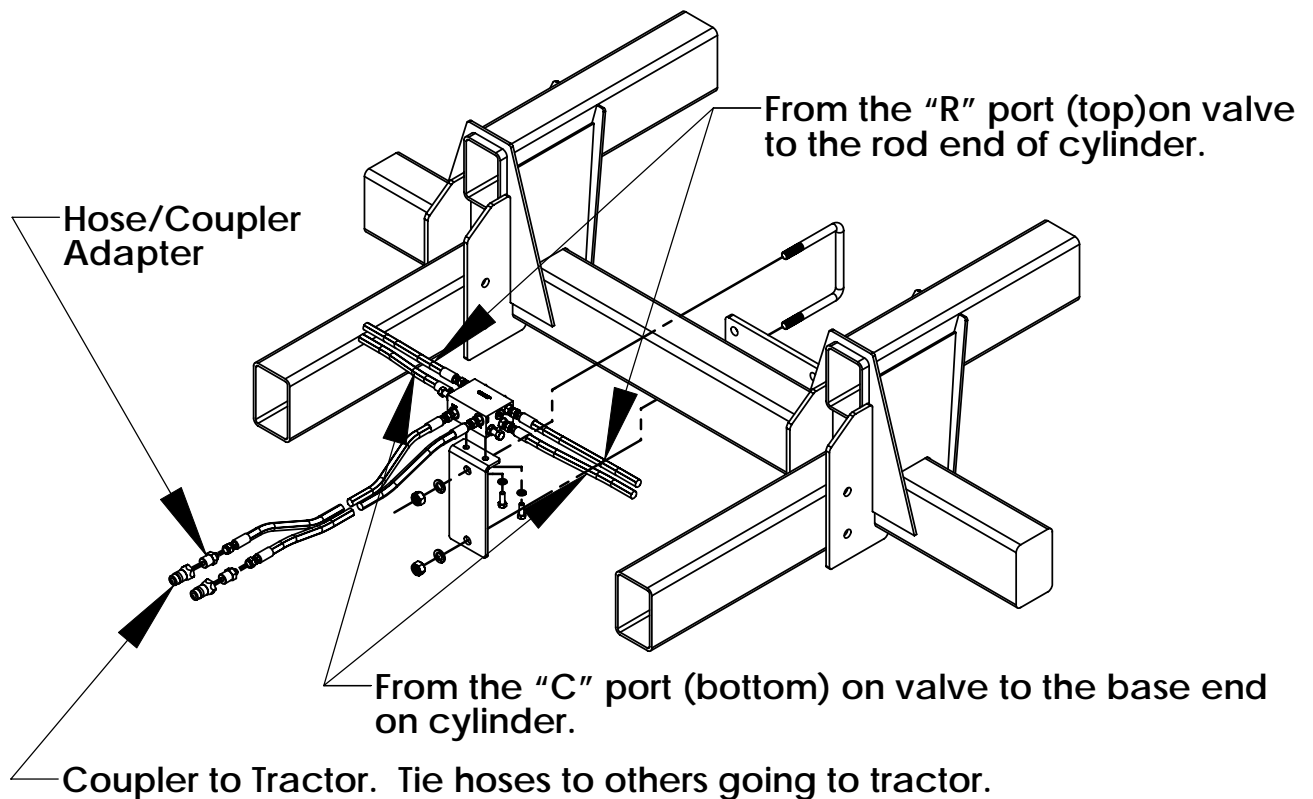

* - The orifice may reduce the oil flow to much and may not allow the valve to cycle as it should. Remove the orifice and control the folding speed with the flow controls on valve.

It works best to have lots of oil flow to the valve and reduce the speed with the valve adjustment bolts. These adjustment bolts are needle valves. If you close them to much the valve will not cycle. If you open them to much so that the bolt comes out of the valve the seals may become damaged and leaking will occur.