
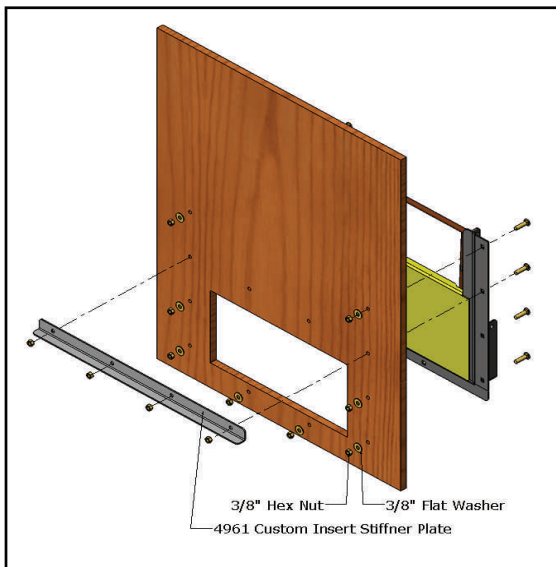
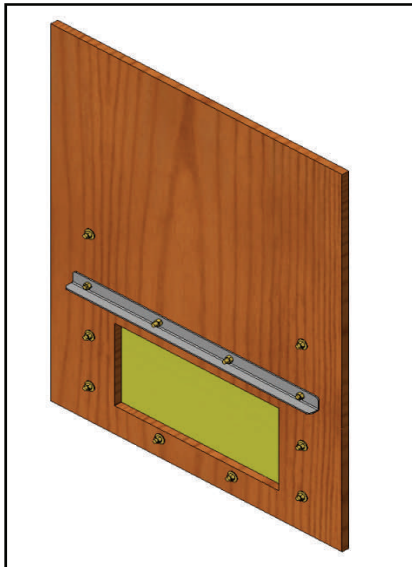
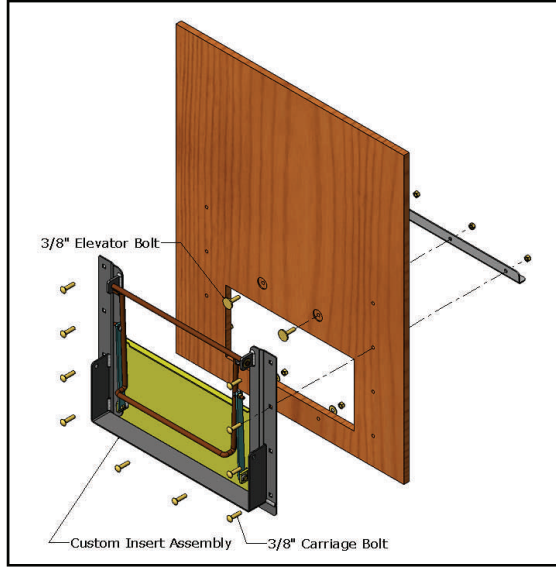


9285 Custom Bin Door Insert

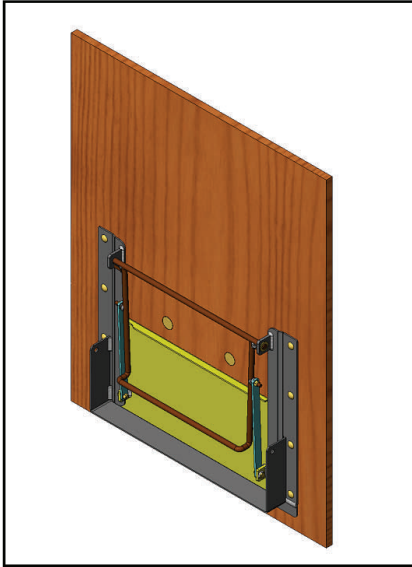


Wooden Panel - 3/4" fir plywood or better recommended.

Mark out holes shown and then use insert as a template for the remainder.

Drill 3/8" holes.

The elevator bolts need to be flush with panel for slide to work.

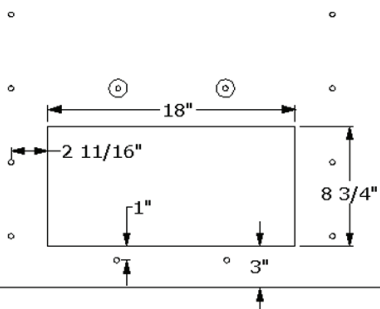

Fastener Package

3/8 X 1-1/2" CARR GR 5 YZ	FNS-221B5PC	10
3/8x1-1/2" ELEVATOR BOLT	FNS-121BE5PC	2
3/8" FLAT WASHERS USS YZ	FNS-72RP	8
3/8" NC HEX NUT YZ	FNS-52RPC	12

HAUKAAS
 (306) 355-2718 www.haukaas.com